



TABELLA GLOBALE CODICI MARCHE / TABLEAU GÉNÉRAL DES CODES MARQUES / GLOBAL BRAND CODES TABLE

ACSOM	4980
ADC	4861
AERMEC	0000, [0020-0039], [3600-3609], [3720-3739]
AICSON	[0040-0059]
AIDELONG	[1293-1295]
AIRTEK	[3775-3779]
AIRWELL	0000, [0020-0039], [0180-0199], [1230-1239], 2500
AITE	[1296-1299]
AKIRA	[3796-3797]
ALPIN	[4989-4991], 4998
AMCOR	2501, 2508, 2509, 2532, 4973, 4978, 4979
AMICO	4982
AMSTRAD	[0001-0019], [0140-0149], [3775-3779]
AOKE	[1301-1302]
AOLI	1300
APTON	4862
ARCO-AIR	[0140-0149]
ARGO	0000, [0020-0039], [1230-1239], 1282
ARISTON	0000, [0020-0039], [0040-0059], [1230-1239]
ARTEL	0000, [0020-0059]
ASHITA	[0140-0149]
ASR	0000, [0020-0039]
AUCMA	[1210-1229], 4933
AURORA	[0040-0059]
AUX	[0180-0199], [3600-3609]
AZUKI	[0001-0019]
BAIXUE	1299
BALTUR	[3600-3609]
BEIJINGJINGDIAN	1304
BEKO	[0000-0059], [0180-0199]
BENT	[0080-0099], [0120-0149], [1230-1239]
BIG THUMB	1331
BLUE STAR	0057, 2550, 4887
BOERKA	3630, [1305-1306]
BORLER	1307
BOSHI	1310
BOSHIGAO	1308, 1309
BREEZE	[0080-0099]
CAIXING	1311
CARRIER	[0040-0059], 2599, [3690-3699], [4890-4899]
CHANGFENG	0190

CHANGFU	[4835-4838]
CHANGHONG	[0059-0079], 4934, 4947
CHANGLING	[2312-2323]
CHENGYUAN	2324
CHIGO	[0080-0099]
CHUANGHUA	[1325-1328]
CHUANYAN	4861
CHUNLAN	[0170-0179]
CLIMAVENETA	[0000-0039], [0120-0149], 4900
COLROLLA	4861
CONROWA	[1337-1341]
CONSUL	4993
COMFEE	[0040-0059]
COOLAIR	0000, [0020-0039], [0180-0199], [2500-2550], 4860
CORONA	[3760-3769]
CROWN	4861
DAEWOO	[1332-1333]
DAIKIN	[3740-3759]
DAITSU	[0000-0059], [1230-1239], [3600-3609]
DAJINXING	[1329-1330]
DAKE	4861
DAOTIAN	[4821-4824]
DELCHI	[3690-3699], [4890-4899]
DE LONGHI	[0000-0039], [0120-0149], 4900
DIY	0044, 0090, 0092, 0095
DONGXIA	1334, 1335
DONGXINBAO	[1260-1268]
DUNAN	1336
ECO AIR	0000, [0020-0039]
EKOKAI	0000, [0020-0039]
ELCO	4982
ELDLONG	[1293-1295], 4861
ELECTER	[4981-4986]
ELECTRA	0000, [0020-0039], [0180-0199], [1230-1239], 2500
ELECTROLUX	0000, [0020-0039], [2471-2474], 4807, 4808, 1250, 4906
EMAILAIR	0000, [0020-0039], [0180-0199], [2500-2550], 4860
FANAIR	0000, [0020-0039]
FANTINI COSMI	0000, [0020-0039]
FEDDERS	4878
FEIEDRICH	4879
FEIGE	4829, 4830
FEILU	[1240-1249]

FER- FERROLI	[0000-0059], [1230-1239], 4901
FIRST	4864
FRESTECH	[1270-1279], 4944, 4945
FUJITECH	[0120-0149]
FUJITHERMA	0000, [0020-0039]
FUJITSU	[3700-3719]
FUNIKI	4992
GALANZ	[0124-0129], [0134-0149], [4936-4940]
GE	0000, [0020-0059]
GENERAL	[3700-3719]
GFORCE	0063, 0064, 4846
GEER	1342, 1343
GLEE	1280
GOLDSTAR	1303
GREE	0000, [0020-0039]
GUANGDA	1345, 1346
GUQIAO	1344
HAIER	[0001-0019]
HELTON	4863
HEMILTON	0095
HERMANN	[0001-0019], [0040-0059], [0080-0099]
HICON	1391, 1392
HISENSE	[1230-1239]
HITACHI	[3640-3659]
HOKKAIDO	[0040-0059], [0080-0099]
HONGYI	1347
HOWELL	[0040-0059], [0080-0099]
HUABAO	[0100-0109]
HUAGAO	1348
HUAKE	1349, 1350
HUALING	[0150-0169], 0045
HUAMEI	1351, 1352
HUANGHE	1353
HUAWEI	1281
HUIFENG	[1354-1357], 1360
HYUNDAI	[3780-3789]
INYCIN	[2475-2483]
JIALE	1358
JIANGNAN	1359
JINBEIJING	1361, 1362
JINDA	2491, 2492
JINSONG	[1363-1365]
JMSTAR	1360
JOHNSO	1282
KANGLI	[1368-1370]
KELONG	[0110-0119], [1230-1239]

KELVINATOR	0000, [0020-0039], [0180-0199], [3660-3689]
KENDO	[0001-0019], [0040-0059], [0080-0099], [2551-2599]
KENWOOD	[0110-0119]
KLIMATAIR	[3797-3799], 4800
KOMEKO	[0040-0059], [0080-0099], [0140-0149]
KONKA	1366, 1367
KRIS	4804, 4805
LAMBORGHINI	0000, [0020-0039]
LENOIR	[0080-0099], [0120-0139], [1230-1239]
LENNOX	0000, [0020-0039]
LG	[3600-3609]
LIANGYU	3780
LIKEAIR	1386, 1387
LITTLEDUCK	[2454-2456]
LITTLESWAN	2453
LONGHE	4861
LOREN-SEBO	[4801-4803]
MARIANI CLIMA	[0001-0019], [3600-3609]
MAXA	0000, [0020-0059], [1230-1239]
MASTER CLIMA	[2551-2599]
MCQUAY	[3790-3795]
MEILING	[1388-1391]
MIDEA	[0040-0058]
MINGXING , BOYIN	1290
MITSUBISHI	[2551-2599]
MITSUKA	4904
MITSUSHITO	0000, [0020-0039]
NAKATOMY	[0080-0099]
NATIONAL	[3660-3689]
NEC	[2500-2550], 4860, 4943, 4946
NIKKO	4810, 4811
NISO	1398, 1399, 2497
NORCA	4994
OGENERAL	3659, 3717, 3718, 3719
OLIMPIA SPLENDID	[0110-0119], [0180-0189], [1230-1239]
OLYMPUS	4995, 4996
OPAL	4997
ORIEME	[0140-0149]
PANASONIC	[3660-3689]
PANDA	[2464-2466]
PEREG	4998
PILOT	4902
PINSHANG, XINHUNBAO	1290
PROTECNO	[1230-1239]

PUYI	4862
QIXING	1393
RAYBO	[1371-1383]
REX	[0040-0059], [2471-2474]
RHEEM	[0080-0099]
RHOSS	4903
RICAI	1394
RIELLO	[3640-3659]
RIJIANG	[1395-1397]
ROADSTAR	[0140-0159]
ROWA	[1383-1385]
SACON	2414
SAMSUNG	[3610-3629]
SANYO	[2500-2550], 4860, 4943, 4946
SANZUAN	0190
SAPORO	4861
SAST	[2450-2452]
SAUNIER DUVAL	[0001-0019], [0040-0059], [0080-0099]
SCHNEIDER	0000, [0020-0059]
SEKOM	[0040-0059], [0120-0139]
SENSOR	4860
SERENE	2499
SHAMEI	2400
SHANGLING	[2403-2409]
SHANXING	2401, 2402
SHANYE	4862
SHARP	[3720-3739]
SHAUB LORENZ	[0140-0149]
SHENBAO	2410, 2411
SHENGFENG / FEILU	2412, 2413
SHINCO	[1200-1209]
SHINELCO	[0180-0189]
SHINING	2415
SHUANGLU	[2416-2418], 4946, 4948
SIGMA	2447
SOGO	1291
SONGLINXIA	4862
SONGXING	2419
SOVA	1292, 2420
SOWA	4862, 4863
SOYEA	2411, 2422
SPEED	4987
SRTC	2423
STARIGHT - AIRCON	4880
SUNBURG	[4817-4820]
TADIRAN	2501, 2508, 2509, 2532, 3630, 4969, 4978, 4979, 4991

TAIYA	4862
TASAKI	0000, [0020-0039], [3775-3779]
TCL	[0120-0133]
TEAC	[4850-4859]
TECO	[4831-4834]
TECNO MASTERS	[2551-2599]
TIANJINGKONGTIAO	2424
TIANYUAN	[2425-2428]
TOBO	[1250-1269]
TONGLI	2429, 2430
TOSHIBA	[3630-3639]
TOTALINE	2548
TOYO	[4825-4828]
TRANE	[2551-2599], [4812-4816]
UNI - AIR	1368, 1369
UNICAL	0000, [0020-0059]
VAILLANT	[0000-0059], [0140-0149], [0080-0099]
VORTICE	0000, [0020-0039]
VORTIS	[0080-0099], [0120-0139], [1230-1239]
VIDEOCON	2597, 3627, 3628, 3629, 4884
VOLTAS	0056, 0057, 2549, 2598, 3609, 3627, 3628, 3629
WANBAO	[2431-2433]
WANGZI	4861
WEILI	[2434-2443], [2553-2576]
WEITELI	2444
WHIRPOOL	0000, [0020-0059], [0080-0099], 0119, [2550-2599], [3770-3774], 3739
WUFENG	2445, 2446
XILENG	2448, 2449
XINGHE	2462, 2463
XINLE	[2457-2460]
XINLING	2461
XIONGDI	4862
YAIR	[2467-2471], 0044, [0013-0015]
YAOMA	2470, 4977
YIGONG	2499
YORK	[3775-3779]
YUETU	4881, 4882, 4949
YUTU	[2484-2490]
ZENITH	[0040-0059], [0080-0099]
ZEPHIR	[0080-0099], [0120-0139], [1230-1239]
ZHONGYI	2493-2494
ZUODAN	2495

MELICONI remote control – AC100

Thank you for choosing a Meliconi remote control.

Keep this booklet for future reference

The AC100 remote control is designed to command all the main functions of a domestic air conditioner.

The remote control display is fitted with a back light to make it easier to use in the dark.

WARNING the remote control does NOT have a permanent memory, so if the batteries run completely flat or are removed, the time setting and activation CODE will be lost.

To avoid this inconvenience, change the batteries rapidly (within 15 seconds) and without pressing any keys.

SAFETY WARNINGS

The remote control and batteries must not be exposed to excessive heat, like direct sunlight, fire or similar heat sources. The product is **not a toy**. Keep out of reach of children and pets.

INSERTING THE BATTERIES


The remote control requires 2 new 1.5V alkaline **AAA/LR03** batteries, not included. Insert them as illustrated.

Do NOT use **rechargeable** batteries.

CHANGING THE BATTERIES: The batteries should be changed when the symbols and characters on the LCD display begin to lose clarity or when the operating capacity of the remote is reduced.

IMPORTANT! To avoid losing the remote control settings (time and code), change the batteries rapidly (within 15 seconds) and without pressing any keys.

Do not leave flat batteries in the remote, as they may leak liquid and damage it

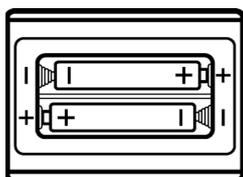

ADJUSTING THE CLOCK

The remote control also features a clock. To adjust it, proceed as follows:

A) Press and hold down the [SET] key on the MELICONI remote control and, without letting it go, press the [MODE] key for an instant. At this point the hours display will start to flash.

B) Using the TEMP [▲] and [▼] keys set the AM / PM hour format (to speed up scrolling keep the keys held down).

C) Press the [SET] key again to access the minutes setting.

D) Now use the TEMP [▲] and [▼] keys to set the minutes.

E) Press the [SET] key again to confirm and exit the clock adjustment procedure.

ACTIVATING THE REMOTE CONTROL

Before using the remote control it is essential to set a specific code for the air conditioner you wish to control.

Use one of the following methods, in the order given below, to identify the specific code and set it on the remote control:

1) BRAND CODE SEARCH

2) DIRECT CODE SETTING

3) AUTOMATIC GLOBAL SEARCH

4) MANUAL GLOBAL SEARCH

IMPORTANT!

Having identified the correct code, shown on the display at bottom right, note it down on the label inside the battery cover; as the next time you change the batteries you may need to reset the remote control code.

• 1 Brand code search

KEY	BRANDS
MODE	GREE / HUALING / HISENSE
	DAIKIN / FUJITSU / CARRIER
TEMP ▲	LG / SAMSUNG
	HITACHI / PANASONIC
	SANYO / SHARP / HAIER / MITSUBISHI
TEMP ▼	SHINCO / AUCMA / AUX
FAST COOL	MIDEA / CHANGHONG / CHUNLAN
FAST HEAT	CHIGO / TLC / KELON
E.A. HEATING	FRESTECH / YAIR

A) Find the brand of air conditioner you wish to command in the table above and note down the corresponding key. If the brand is not in the table, refer to the section **DIRECT CODE SETTING**.

B) Stand in front of the air conditioner and check it is off (STAND-BY).

C) Point the MELICONI remote control at the air conditioner and PRESS and HOLD DOWN the key corresponding to the brand identified previously. (e.g. HISENSE brand = MODE key)

D) TAKE CARE to release the key and stop the search **AS SOON AS** the air conditioner comes on.

E) Check whether the other keys also activate the corresponding functions. If they do not, repeat the procedure from point **B**.

F) Once you have identified a suitable code, shown on the display at bottom right, note it down on the label inside the battery cover. In the future it may be necessary to reset the remote control code.

WARNING

When the air conditioner comes on, if you have not acted quickly enough to stop the search, the remote control may have passed onto the following codes and so it will no longer be able to control the device.

To move backwards through the codes, hold down the **[SET]** key and press for an instant the **ON/OFF [⏻]** key; then release the keys. Use the **TEMP [▼]** key to select the previous code and then press **[SET]**. Check the remote control works.

• 2 Direct code setting

A) Look in the **GLOBAL BRAND CODES TABLE** located inside the booklet for the BRAND of air conditioner you wish to command and note down the corresponding codes linked to it. If the brand is not in the table, refer to the section **AUTOMATIC GLOBAL SEARCH**.

B) WARNING! In the table the codes in sequence groups are written between brackets [squared]; so the codes to be tested are all of those in the interval indicated (e.g.: **[1296-1299]** test all codes from 1296 to 1299 inclusive).

C) Stand in front of the device you wish to control and make sure it is OFF (STAND-BY).

D) Press and hold down the **[SET]** key on the MELICONI remote control and, without letting it go, press for an instant the **ON/OFF [⏻]** key; then release the keys. The 4 figure code on the display flashes.

E) Using the **TEMP [▲]** and **[▼]** keys scroll through the codes on the display until you reach the first of the BRAND codes identified previously. (to speed up scrolling keep the TEMP keys held down).

F) Press the **[SET]** key for an instant.

G) Point the MELICONI remote control at the air conditioner and check whether the code in use does control the main functions on the device.

H) If it does not, repeat the procedure from point **C** using the next code indicated in the table.

I) Once you have identified a suitable code, shown on the display at bottom right, note it down on the label inside the battery cover. In the future it may be necessary to reset the remote control code.

If none of the codes indicated for the BRAND control the air conditioner, refer to the section **AUTOMATIC GLOBAL SEARCH**.

• 3 Automatic global search

A) Stand in front of the device you wish to control and make sure it is OFF (STAND-BY).

B) Point the remote control at the air conditioner and press and hold down the **[SET]** key for about 8 seconds; 4 hyphens will flash on the display. Keeping the **[SET]** key held down, **MAKE SURE** you release the **[SET]** key and stop the search **as soon as** the air conditioner comes on.

C) Check whether the other keys also activate the corresponding functions. If they do not, refer to the **MANUAL GLOBAL SEARCH** section.

• 4 Manual global search

A) Press and hold down the **[SET]** key on the MELICONI remote control and, without letting it go, press for an instant the **ON/OFF [⏻]** key; then release the keys. The 4 figure code on the display flashes.

B) Using the **TEMP [▲]** and **[▼]** keys scroll through the codes on the display until you reach the last code (4999) and press the **[SET]** key.

C) Stand in front of the device you wish to control and make sure it is OFF (STAND-BY).

D) Press and hold down the **[SET]** key on the MELICONI remote control and, without letting it go, press for an instant the **ON/OFF [⏻]** key; then release the keys. The 4 figure code on the display flashes.

E) Point the remote control at the air conditioner and press the **TEMP [▲]** key slowly to scroll the codes one at a time until the air conditioner comes on; at which point press the **[SET]** key to stop the search.

F) Check whether the other keys also activate the corresponding functions. If they do not, repeat the procedure from point **C** to continue the search.

G) Once you have identified a suitable code, shown on the display at bottom right, note it down on the label inside the battery cover. In the future it may be necessary to reset the remote control code.

TIMER FUNCTION

WARNING!

The **TIMER ON** and **TIMER OFF** functions are **ONLY** available if the air conditioner includes them

ONLY one of the **TIMER** functions can be set, not both of them.

Make sure the air conditioner is **ON**.

Set up the required operating conditions on the remote (temperature, fan etc.)

• DELAYED SWITCH ON SETTING

Press the **[TIME ON]** key for an instant, the air conditioner will be switched off and a switch on delay of 1 hour will be set.

To set a longer delay press the **[TIME ON]** key again until the required delay is shown on the display.

To delete the setting, press the **ON/OFF** [⏻] key.

• DELAYED SWITCH OFF SETTING

Press the **[TIME OFF]** key one or several times, set on the display the required delay (in hours) for the automatic air conditioner switch off.

To delete the setting, press the **ON/OFF** [⏻] key.

PROTECTING THE CODE

This function stops the remote control setting code from being accidentally changed.

To activate the function, proceed as follows:

Press and hold down the **[SET]** key, and without releasing it, press the [🔒] key for an instant; at which point the icon is shown on the display.

To deactivate the protection repeat the procedure.

LED TORCH

The remote control includes an LED torch that can be activated by pressing the key .



CAUTION: Do not dispose of batteries in the environment, take them apart or throw them in a fire. Incorrect use may harm the environment and give rise to health and safety hazards. The crossed-out whee bin symbol indicates that the batteries must be disposed of in compliance with current legislation.



The symbol showing a whee bin with a cross through it which appears on the device indicates that at the end of its useful life the product must be collected separately from other waste. Therefore, at the end of the device's life, you must take it to appropriate centres for the differentiated collection of electrical and electronic waste, or return it to the retailer when purchasing a new device of equivalent type, on a one-for-one basis. Suitable differentiated collection to allow subsequent recycling of the decommissioned device, with environmentally-compatible treatment and disposal, help to prevent any negative effects on the environment and health and to promote the recycling of the materials of which the device is made.

TROUBLESHOOTING

! WARNING! !



Various malfunctions are caused by using batteries that are not sufficiently charged.

We recommend checking them and, if necessary, replacing them as shown in the **INSERTING THE BATTERIES** section.

• IF THE REMOTE CONTROL IS NEW AND YOU CANNOT MAKE IT WORK

Check you have carried out all the instructions indicated in the manual precisely. If necessary repeat all the steps described above.

• IF THE REMOVE CONTROL STOPS WORKING

Remove the batteries, press several keys and insert NEW batteries.

Set the specific code again for the device you wish to command, as described in the section **REMOTE CONTROL ACTIVATION**.

Make sure too that the remote control is pointing at the device and that there are no obstacles in the way.

• IF THE REMOTE CONTROL DOES NOT EXECUTE CERTAIN FUNCTIONS

To obtain the required function, refer to the **DESCRIPTION OF KEYS AND FUNCTIONS** section.

If some of the MAIN functions are not available, you are probably using an incorrect code. Find and set a more suitable code as described earlier.

ASSISTANCE

If you would like more detailed information about the product, please consult the www.meliconi.com/guida website. **NOTE!** **When contacting technical support it is INDISPENSABLE that you communicate the BRAND and MODEL of the device you want to control and which MELICONI remote control you are using.**

To contact an operator call our call-center at **+39 02 66012766** or send an e-mail to: telecomandi@meliconi.com

2 year WARRANTY

Keep the purchase receipt to validate the warranty. The warranty is voided if the product is tampered with or used improperly.



MELICONI S.p.A. - Via Minghetti, 10
40057 Cadriano di Granarolo Emilia - BOLOGNA - ITALY
www.meliconi.com - e-mail: info@meliconi.com

DESCRIPTION OF THE KEYS AND FUNCTIONS

Some of the functions on the original remote control may NOT be available on the MELICONI remote control.

